

6-2. Customization

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Settings that can be customized at a dealer

The following table includes some settings that can be customized using the navigation system display. (→P. 579)

Item	Function	Default setting	Customized setting
Smart access system with push-button start (→P. 54)	Smart access system with push-button start	On	Off
	Door unlock function	Driver's door	All the doors
			Each door
			Same side doors
Wireless remote control (→P. 67)	Wireless remote control	On	Off
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step

Item	Function	Default setting	Customized setting
Wireless remote control (→P. 67)	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	Off
			30 seconds
			120 seconds
	Operational signal (Emergency flashers)	On	Off
	Trunk unlocking operation	Push and hold	Push twice
			One short push
	Alarm (panic mode)	On	Off
Smart access system with push-button start and wireless remote control (→P. 54, 67)	Operation signal (Emergency flashers)	On	Off
	Open door warning buzzer	On	Off
Door lock (→P. 70, 531)	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors.	Off	On
	Shifting the shift lever to "P" unlocks all doors.	On	Off

Item	Function	Default setting	Customized setting
Door lock (→P. 70, 531)	Shifting the shift lever to position other than “P” locks all doors.	On	Off
	Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Trunk (→P. 75)	Power trunk opener and closer function	On	Off
Power easy access system (→P. 98)	Driver's seat movement when exiting the vehicle	Full	Off
	Steering wheel auto away and return function	On	Partial
Power windows (→P. 121)	One-touch close operation using the power window switches on the front passenger door and each rear door	On	Off

Item	Function	Default setting	Customized setting
Power windows (→P. 121)	One-touch front passenger window or rear window close operation using the power window switch on the driver's door	On	Off
	Mechanical key linked operation	Open and close	Off
			Open only
			Close only
	Wireless remote control linked operation	Off	On
	Linked entry function	On	Off
Moon roof (→P. 124)	Mechanical key linked operation	Open and close	Off
			Open only
			Close only
	Linked operation of components when mechanical key is used	Slide only	Tilt only
	Wireless remote control linked operation	Off	On
	Linked operation of components when wireless remote control is used	Slide only	Tilt only
	Linked entry function	On	Off

Item	Function	Default setting	Customized setting
Turn signal lever (→P. 195)	Times of flashing of the lane change signal flashers	3	Off
			5
			7
			9
			11
Automatic light control system (→P. 216)	Light sensor sensitivity	Standard	-2 to 2
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 second
			60 seconds
			90 seconds
	Automatic high beam system	On	Off
Air conditioning system (→P. 341)	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual
	A/C auto switch operation	Auto	Manual
	Exhaust gas sensor sensitivity	Standard	-3 to 3
	Air conditioning control of Eco drive mode	On	Off
Lights (→P. 216)	Daytime running light system (U.S.A. only)	On	Off

Item	Function	Default setting	Customized setting
Illumination (→P. 365)	Time elapsed before the interior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Time elapsed before the exterior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2
	Operation when the doors are unlocked	On	Off
	Operation after the “POWER” switch is turned OFF	On	Off
Seat belt reminder (→P. 508)	Footwell lighting	On	Off
	Shift lever lighting	On	Off
	Vehicle speed linked seat belt reminder buzzer	On	Off

Settings that can be customized using the navigation system display

You can customize the following settings using the navigation system display.

(For further information on customizing settings using the navigation system display, refer to the Navigation System Owner's Manual.)

Item	Function	Default setting	Customized setting
Smart access system with push-button start (→P. 54)	Smart access system with push-button start	On	Off
	Door unlock function	Driver's door	All the doors
			Each door
			Same side doors
Wireless remote control (→P. 67)	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	Off
			30 seconds
			120 seconds

Item	Function	Default setting	Customized setting
Smart access system with push-button start and wireless remote control (→P. 54, 67)	Operation signal (Emergency flashers)	On	Off
Door lock (→P. 70, 531)	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors.	Off	On
	Shifting the shift lever to "P" unlocks all doors.	On	Off
	Shifting the shift lever to position other than "P" locks all doors.	On	Off
	Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Power easy access system (→P. 98)	Driver's seat movement when exiting the vehicle	Full	Off
			Partial



Item	Function	Default setting	Customized setting
Turn signal lever (→P. 195)	Times of flashing of the lane change signal flashers	3	Off
			5
			7
			9
			11
Automatic light control system (→P. 216)	Light sensor sensitivity	Standard	-2 to 2
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 second
			60 seconds
			90 seconds
Air conditioning system (→P. 341)	Switching between outside air and recirculated air mode linked to “AUTO” switch operation	Auto	Manual
	A/C auto switch operation	Auto	Manual
	Exhaust gas sensor sensitivity	Standard	-3 to 3
Lights (→P. 216)	Daytime running light system (U.S.A. only)	On	Off

Item	Function	Default setting	Customized setting
Illumination (→P. 365)	Time elapsed before the interior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Time elapsed before the exterior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2